PRODUCT INTRODUCTION

1.Package Contents:

■ LED Bulb X2

■ Gloves X2

User Manual X1

2.Product specifications

Operating voltage	DC (9-16V)
IP rating	IP67
Color temperature	6000 - 6500K
Operating temperature	-40°C-85°C
LED chips	High-brightness LED chips
Heat sink	6063 aluminum alloy
Cooling method	Turbo Cool Fan

USER INSTRUCTIONS

- Please purchase the product through official channels, otherwise we won't provide after-sales service.
- As the product has small & sharp parts, please keep it away from children.
- After receiving the product, please carefully check whether it is damaged or any part is missing, If there is any problem, please contact Customer Service.
- This product is only fit for vehicles which use 12V batteries. High voltage may cause damage.

TECHNICAL SUPPORT & SERVICE TEAM

E-mail: support@sealight-led.com

Tel: (+1)805-538-4353

If there is any questions about the bulbs, contact our service team for help.

INSTALLATION INSTRUCTIONS

1.Important Notes:

2.Models: H7

Installation mode 1

original light bulb

Please light-up the bulb before installation.

YouTube H7 LED headlight bulb installation

Step 1: Remove the original car plug,

open the spring clip, take out the

- 2 The OE halogen bulb would be extremely hot for a quite long time after shutting down the engine. To avoid burns, please wait at least 2 hours before replacing the lamps.
- 3 Wear gloves while replacing the lamps, and do not touch the LED chips.



Step 3: Fix it in place with a spring



the original vehicle socket



Step 1: Remove the original car plug and take out the original light bulb

Installation mode 2



Step 2: Insert the led bulb into the original adapter



Step 5: When the LED bulb is fixed, the two sides equipped with LED lamp beads should face the direction of 3-9 o'clock respectively



Step 3: Insert the LED bulb into the assembly, put the tabs of the locking ring opposite to the slot of the assembly, and tighten it in the assembly



Step 4: When the LED bulb is fixed, the two sides equipped with LED lamp beads should face the direction of 3-9 o'clock

Step 2: Insert the LED bulb into the

assembly and align the tabs of the

ring with the slot of the assembly



1.Q: The model of lamps I purchased is different from my OE halogen lamps.

Can I get an exchange for the correct model?

- A: The main reasons:
- (1) Amazon Confirmed Fit system is not 100% accurate.
- (2) Your headlight assembly is not an OE part. Please double check the model of your OE halogen bulb. And contact our Customer Service for an exchange.
- 3.Q: Do you meet the five phenomenons below?
- Errors on instrument panel;
- (2) The Lamp keeps flashing;
- (3) Can't switch between high and low beams;
- (4) High and low beam reversed;
- (5) The Lamp does not turn on or off.

A: The above phenomenons are decoding problems, which are mainly caused by the automotive computer failing to detect the correct signal. You can contact Customer Service to obtain the decoder and solve the decoding problem.

4.Q: How to adjust the lamps to 3-9 o'clock? I've read all the instructions, but still can't find the method.

A: We recommend keeping the LED chips facing the 3 o'clock and 9 o'clock positions to ensure the best beam pattern and visual effect. However, it is impossible to adjust to this position for some vehicles. There is no need to worry about the position of the LED chips as long as the beam pattern is acceptable.

5.Q: The Daytime Running Lamps work incorrectly, it keeps flashing. How can I solve the issue?

A: If your Daytime Running Lamp and High beam is the same bulb, the case would be complicated to solve. Please contact Customer Service.

WARRANTY DESCRIPTION



Extended warranty period:

E-mail: support@sealight-led.com

Links: https://sealight-led.com/membership

Made In China

SEALIGHT"

SEALIGHT"



User Manual

www.sealight-led.com

support@sealight-le

8