

Fig. 5: Install the new HID bulb into the assembly and secure it with a spring fastener; rotate clockwise to fix it;

Fig. 7: Close the back cover and close the Engine Hood, then you are done.

PRODUCT PARAMETERS

Voltage	D1S/D2S:85V D3S/D4S:45V
Color Temp	4300K/6500K/8000K
Ambient Temp	- 40°C - 105°C

FAQ

1. Q: Fail to match with your car?

A: You may buy the wrong bulb model, please check and replace it.

2. Q: Fail to switch on after installation or switch off automatically in few minutes after on?

A: It may be caused by the mismatch between the bulb and ballast. The output characteristics of ballast may vary for different vehicle models, so there will be a certain probability that the voltage output waveform is unmatched, causing the bulb can't be switched on normally.

3. Q: Fail to switch both headlights on?

A: Maybe one bulb is not installed properly, please check it, and then try to switch the left and right bulb for a further test.

4. Q: Poor Light Pattern?

A: Maybe the bulb is not installed in place, causing the light point to not be in focus, reinstall it.

5. Q: The plug is wrong connected?

A: There are a positive and a negative on the plug, please make sure which side is positive, which is negative. If the PIN is deformed, correct it with a tool and reinstall it.

TECHNICAL SUPPORT & SERVICE TEAM

E-mail: support@sealight-led.com


Tel : (+1) 626 699 3998

If there is any questions about the bulbs, contact our service team for help.


Made In China

SEALIGHT

SEALIGHT

 (+1)626 699 3998

 www.sealight-led.com

 support@sealight-led.com

**HID
LIGHTING** 

User Manual

PRODUCT INTRODUCTION

TIPS: If the product is missing, damaged, deformed, please contact us for a free replacement, sorry for the trouble.

1.Package Contents:

- HID Bulb X2
- User Manual X1
- Gloves X2

INSTALLATION INSTRUCTIONS

1. If you have no experience in replacing a bulb, please search on YouTube and check the installation video before installing it.

We suggest you search keywords "HID+ Model you bought +headlight bulb"

2.Notes and Instructions before Installation

- The head of the HID bulb is made of glass, please take care to prevent breakage during installation and operation;
- The head of the HID bulb is an optical device. It is recommended to wear gloves during the installation to avoid smearing the bulb surface and affecting its optical effect;
- After the bulb is installed correctly, there will still be a certain space for turning. No need to worry about it, it's normal;
- Please don't look directly at the HID bulb turned on to prevent your eyes from being hurt by the light;
- Due to the limited operating space of some models, you may need to remove the assembly or remove some equipment;
- There are a positive and a negative on the plug, please note the direction during installation.

INSTALLATION STEPS

1. Models: D1S/D3S/D8S

Installation mode 1

Fig. 1: Park the vehicle and make sure the headlights are turned off for more than half an hour, in case you get burned;

Fig. 2: Open the hood, locate the bulb that needs to be replaced, and remove the dust cover (the ballast and the back cover are one piece for most vehicle models), which you may need to rotate or pull out;



Fig. 3: Locate the HID bulb, and turn counterclockwise or loosen the spring to remove the bulb. Locate the HID bulb, and turn counterclockwise or loosen the spring to remove the bulb;



Fig. 4: Connect the new HID bulb to the plug, and then install it into the assembly, pay attention to align the positioning slot when installing;



Fig. 5: Fasten the bulb in place by turning it clockwise;

Installation mode 2

Fig. 1: Park the vehicle and make sure the headlights are turned off for more than half an hour, in case you get burned;

Fig. 2: Open the hood, locate the bulb that needs to be replaced, and remove the dust cover (the ballast and the back cover are one piece for most vehicle models), which you may need to rotate or pull out;

Fig. 3: Locate the HID bulb, and turn counterclockwise or loosen the spring to remove the bulb. Locate the HID bulb, and turn counterclockwise or loosen the spring to remove the bulb;



Fig. 4: Take out the HID bulb;



Fig. 5: Install the lock ring into the chuck of the HID bulb.



Fig. 6: Install the new HID bulb into the assembly;



Fig. 7: Turn clockwise to secure the bulb;

Fig. 8: Close the back cover and close the Engine Hood, then you are done.

2. Models: D2S/D4S

YouTube | HID D2S HEADLIGHT BULB INSTALLATION

Fig. 1: Parking your car, and make sure the headlights are turned off for more than half an hour to avoid burns;

Fig. 2: Open the hood, locate the bulb that needs to be replaced, and remove the back cover (the ballast and the back cover are one piece for most vehicle models), which you may need to rotate or pull out;



Fig. 3: Locate the HID bulb, and unplug the ballast. You may need to turn the plug counterclockwise and pull it out;



Fig. 4: Open the spring fastener, and take out the bulb;